


# MITER SAW BOSCH GCM 8 SJL

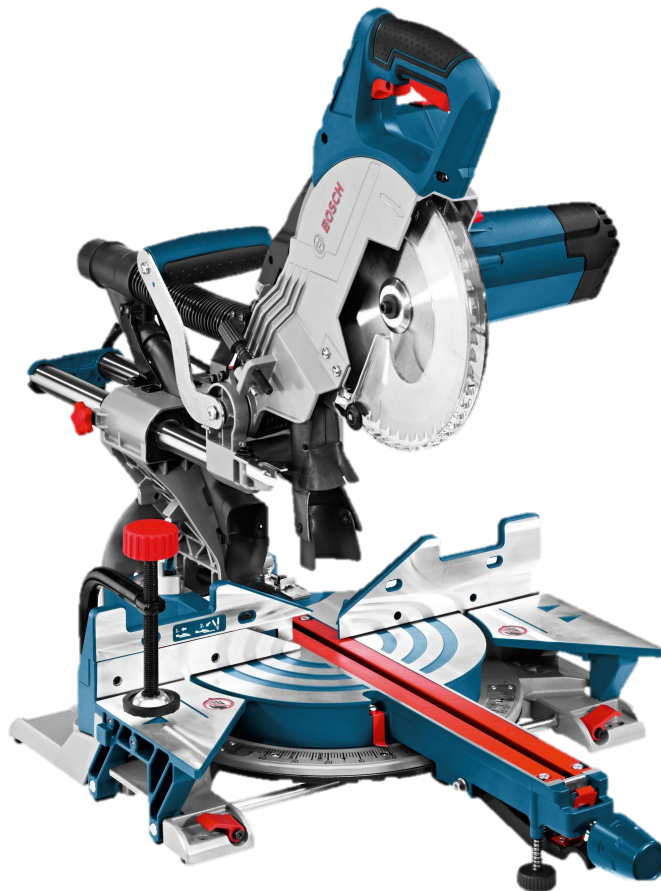


# SAFETY

- Do NOT touch the saw blade
- Do NOT wear gloves, watches and jewellery
- Cut only wood
- Clean after usage
- Use the ventilation



# TERMS

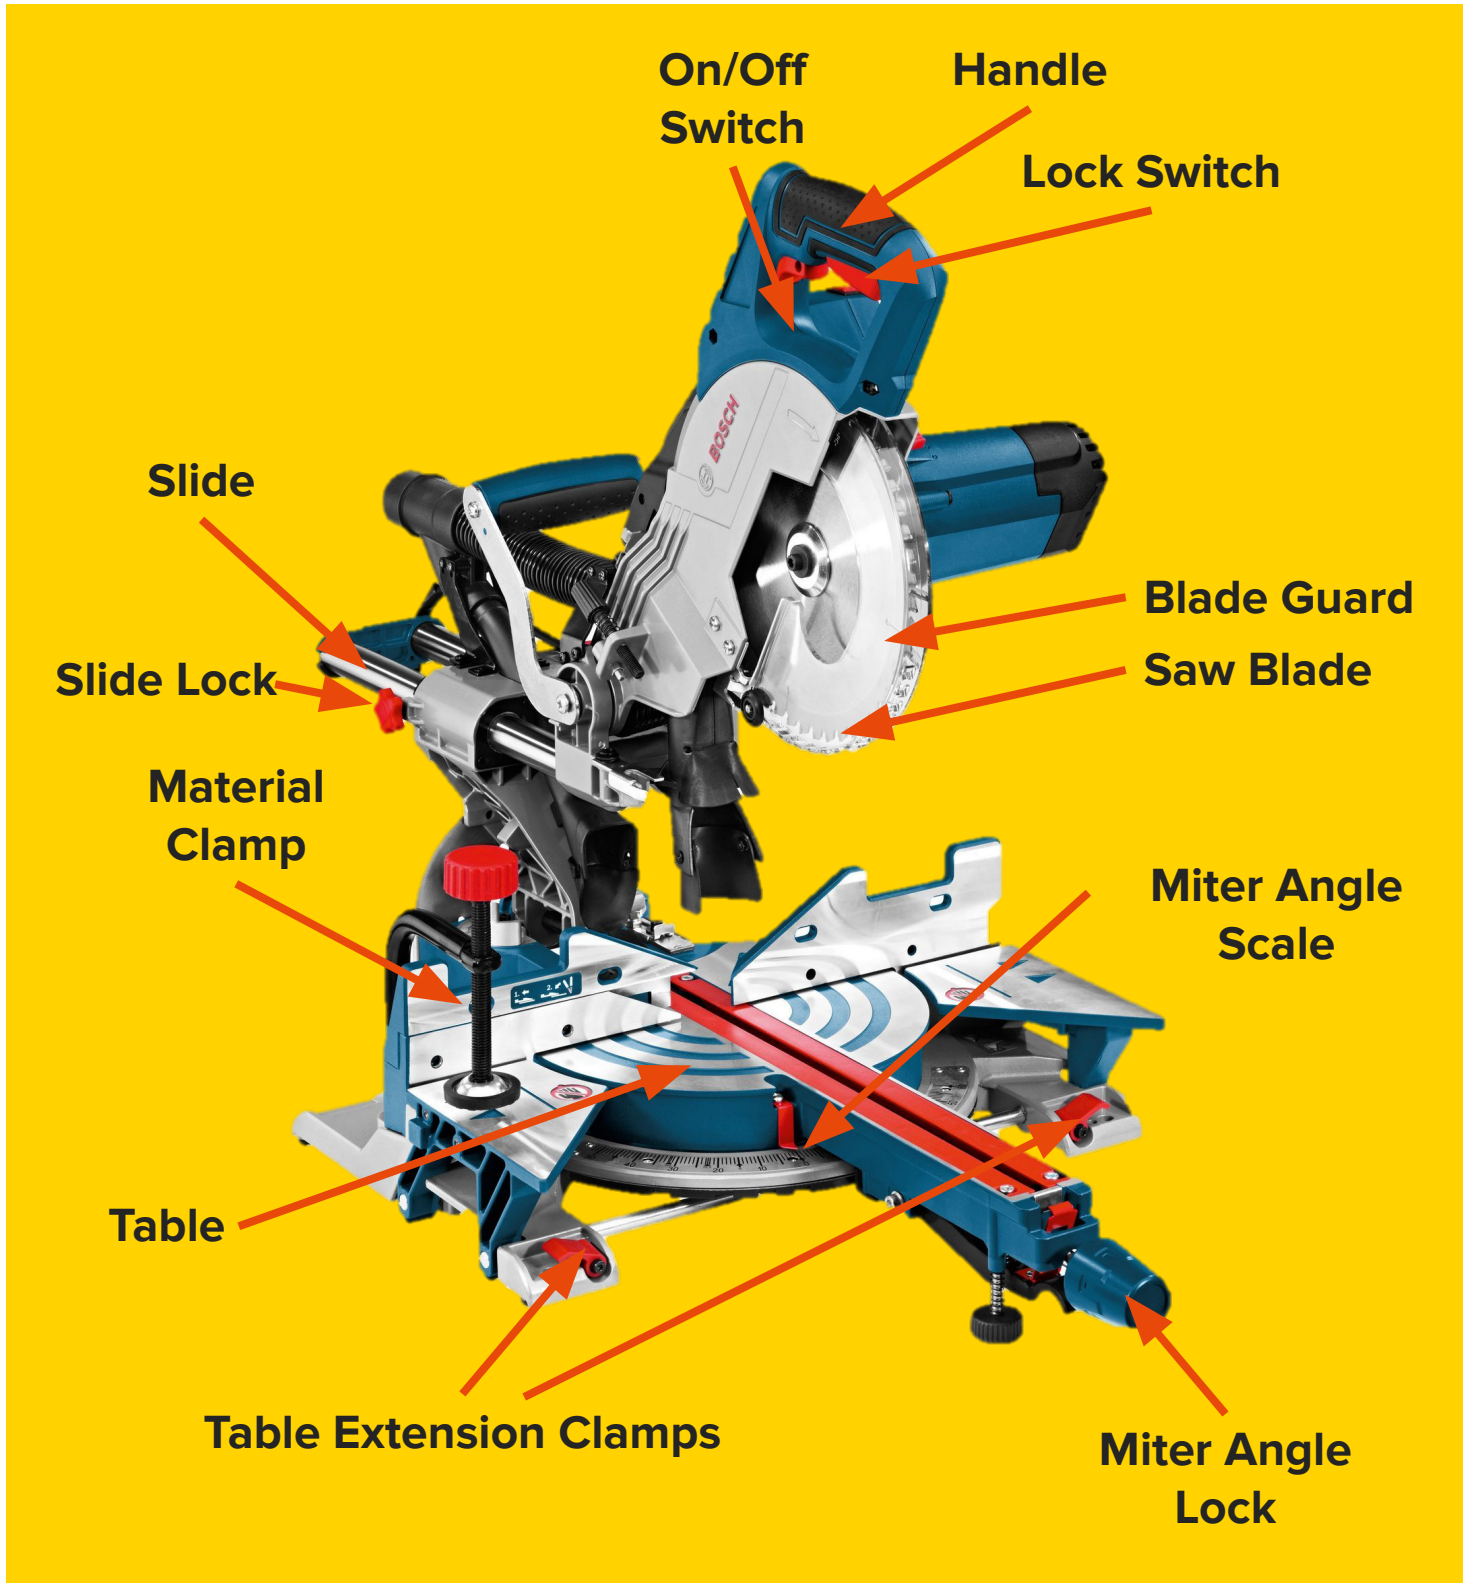

# HOLDING THE WORKPIECE


## Clamps

Always use the material clamp to fix the workpiece before cutting!





## Hands off

NEVER hold the workpiece with your hand close to the saw blade!

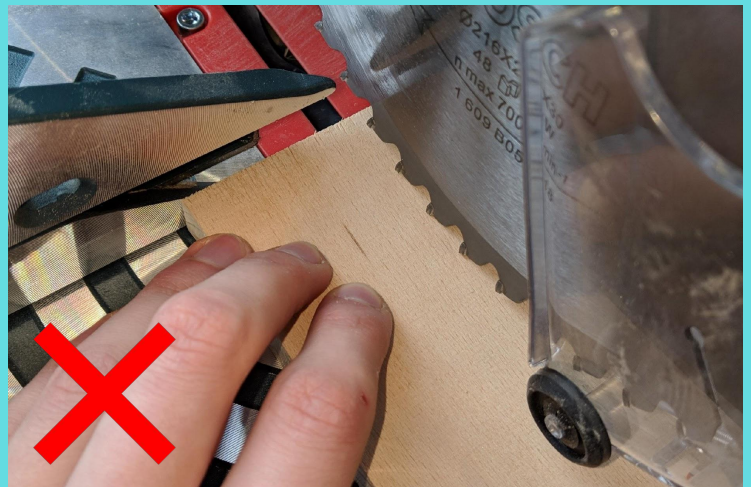

## Extensions

For longer workpieces, use the table extensions

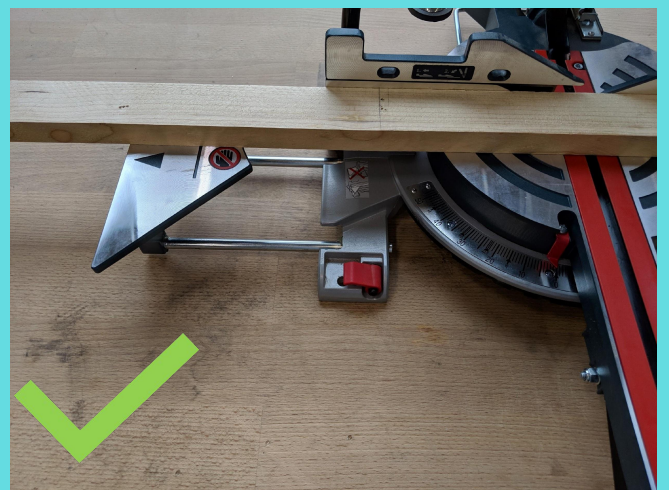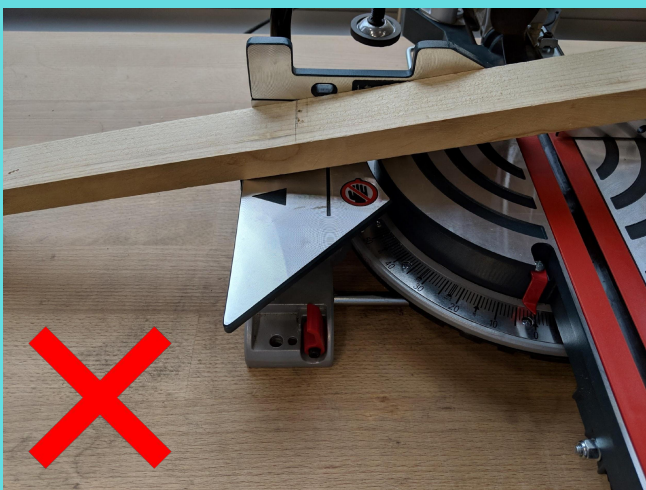

# ALIGNING


## Using the laser

Use the laser to see where the workpiece will be cut.

On/Off laser switch



The laser ray shows you the **left side** of the final cut

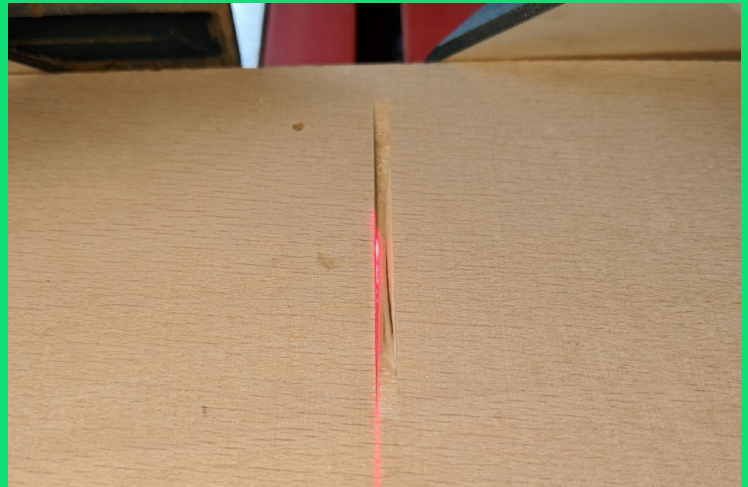

# CUTTING

## Short cut

Grab the handle with one hand  
Press the On/Off-switch and the  
lock-switch  
Push the handle down slowly



## Long cut

Loosen the slider lock – you can now  
move the slider  
Start cutting at the front and push the  
handle towards the end of the machine  
until your cut is completed.



# CUTTING WITH AN ANGLE

## Miter

- Open the miter angle lock  
Press the miter detent lever  
Rotate the table
- Use the miter angle indicator to set the required angle
- Close the miter angle lock



Detent lever



Angle lock



# CUTTING WITH AN ANGLE

## Bevel

- Open the bevel clamping lever
- Adjust the bevel angle using the bevel angle scale
- Close the bevel clamping lever

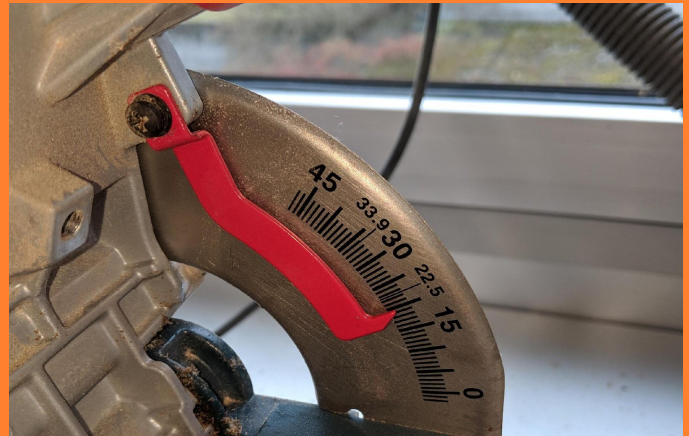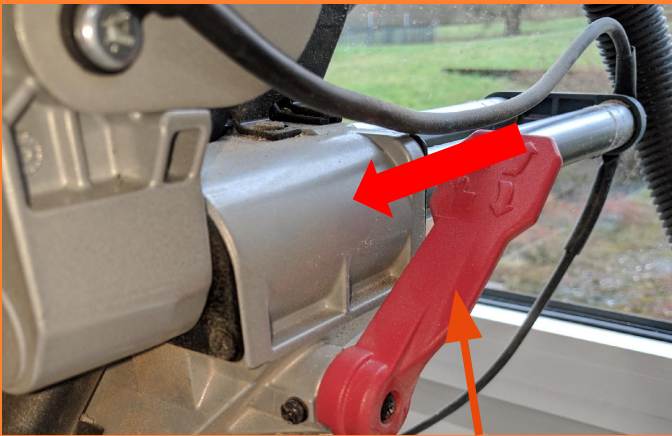

Bevel clamping lever

IMPORTANT: Move the adjustable fence to the left

